



Models 357_{SIX} & 357_{FOUR} OWNERS MANUAL

**READ ALL INSTRUCTIONS AND WARNINGS IN
THIS MANUAL BEFORE USING THIS AIRGUN.**

Congratulations and thank you for choosing Crosman Airguns Model 357 CO₂ pellet Revolver.

The 357 includes many advanced features available for the first time in an airgun. These features will add to the life of your new airgun and give you easier handling, greater accuracy and more enjoyment.

Our unique break-open barrel and easy loading pellet clip makes target shooting faster and more fun than ever. Extra pellet clips are available and you will find that 3 pre-loaded clips will fit conveniently in an empty Crosman Copperhead Belt Pak.

The break-open barrel design makes it easy to clear the barrel if a pellet ever jams.

You will also find an adjustable rear sight and a feel and balance to the 357 that will make your target shooting more accurate.

To get the most enjoyment from your new airgun, please read these instructions completely. And remember, the Model 357 is not a toy. Treat it with the same respect you would a firearm. Always carefully follow the safety precautions described in these instructions.

Thank you for choosing a Crosman airgun.




⚠ WARNING: NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 400 YARDS (366 METERS).
 READ ALL INSTRUCTIONS BEFORE USING.
 BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS ABOUT THE USE AND OWNERSHIP OF THIS AIRGUN.

THIS AIRGUN IS INTENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER.

3

Models 357_{SIX} & 357_{FOUR} .177 CALIBER, CO₂ POWERED PELLET REVOLVER

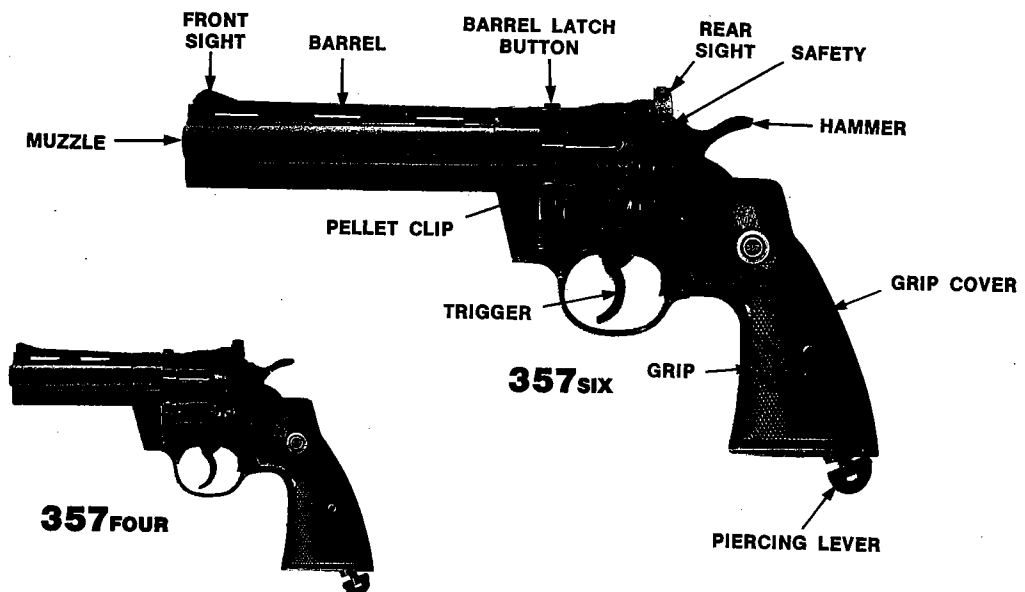

5

HOW TO OPERATE YOUR REVOLVER

1. Putting Revolver "On Safe"
2. Making Sure Revolver is Not Loaded
3. Removing and Installing CO₂ Cylinder
4. Loading and Unloading Pellets in Revolver
5. Aim and Fire Safely
6. Removing a Jammed Pellet from Revolver
7. Maintaining your Revolver
8. Safety Review
9. Trouble Shooting Guide

FOLLOW THESE IMPORTANT STEPS FOR SAFE AND TROUBLE-FREE OPERATION

7

1. Putting Revolver "On Safe"

- A. Locate Safety below Rear Sight, Fig. 1. Pull the Hammer back slightly and with your other hand push Safety in from the left side of Revolver. Gently release the Hammer.

⚠ WARNING: ALWAYS PUSH THE SAFETY ALL THE WAY IN. THE SAFETY IS NOT "ON SAFE" UNLESS THE RED MARK IS ALL THE WAY INSIDE THE FRAME OF THE REVOLVER.

- B. Even when the Safety is "On Safe" you should continue to handle the Revolver safely. Don't point the gun at anything you don't intend to shoot.
- C. To take Revolver "Off Safe" push safety in from the right side.

NOTE: With Revolver "On Safe" the Hammer and Trigger will still operate, but CO₂ cannot be released and a Pellet cannot be fired. Always keep gun "On Safe" until you are ready to shoot in a Safe Direction.

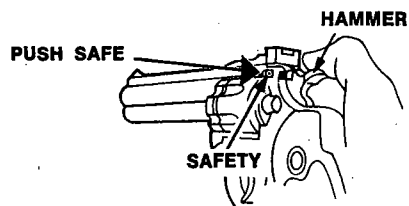


FIG. 1

