

LIMITED 90 DAY WARRANTY

This product is warranted to the retail consumer for 90 days from date of retail purchase against defects in material and workmanship and is transferable. To register the serial number of your gun, please return the Warranty Record Card. The warranty is not conditioned on the return of the card.

WHAT IS COVERED

Replacement parts and labor. Transportation charges to Consumer for repaired product.

WHAT IS NOT COVERED

Transportation charges to Crosman for defective product. Damages caused by abuse or failure to perform normal maintenance—see Owner Manual. Sales outside of the United States. Any other expense. CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

 
Printed in U.S.A.

P/N 44A 503

7J8

MODEL 44/.177 PEACEMAKER

OWNER'S MANUAL

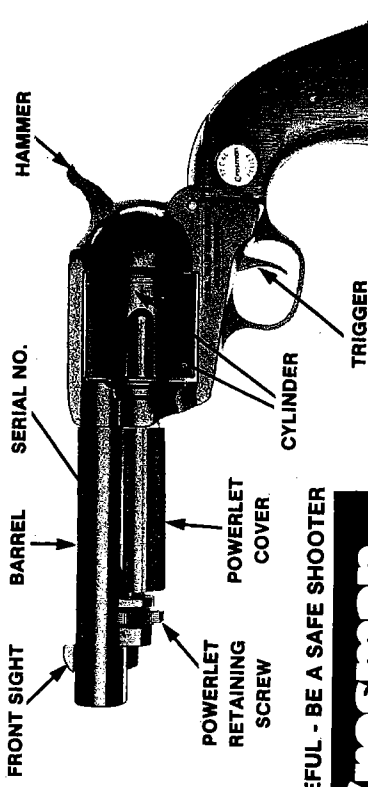

BE CAREFUL - BE A SAFE SHOOTER



READ BEFORE USING PISTOL

WARNING: THIS AIR GUN IS NOT A TOY AND MAY CAUSE DEATH OR SERIOUS INJURY, PARTICULARLY TO THE EYES, IF MISUSED OR USED CARELESSLY MAY BE DANGEROUS UP TO 200 YARDS (183 METERS). READ ALL INSTRUCTIONS BEFORE USING. THIS AIR GUN REQUIRES ADULT

SUPERVISION IF THE USER IS UNDER 16 YEARS OLD AND SHOULD NOT BE USED BY ANYONE UNDER 8 YEARS OF AGE. PURCHASER AND USER HAVE THE RESPONSIBILITY TO CONFORM TO ALL LAWS CONCERNING THE USE AND OWNERSHIP OF THIS GUN.

BE CAREFUL - BE A SAFE SHOOTER

HOW TO OPERATE

IMPORTANT: Steps for safe and satisfactory operation.

- Step 1 Remove factory installed CO₂ Powerlet.
- Step 2 Load and pierce CO₂ Powerlet
- Step 3 Load Super Pellets
- Step 4 Aim and Fire

CAUTION: WEAR SAFETY GLASSES WHEN SHOOTING

 
- Step 1 REMOVE THE FACTORY INSTALLED CO₂ POWERLET

Your new gun has an empty CO₂ Powerlet in it which must be removed. It was used to test the gun at the factory.

CAUTION: KEEP HANDS AWAY FROM ESCAPING CO₂. EXHAUSTED CO₂ GAS CAN CAUSE FROSTBITE WHEN ALLOWED TO COME IN CONTACT WITH SKIN.

Loosen Powerlet Retaining Screw, open Powerlet Cover and remove Powerlet. (fig. 1)

Step 1 REMOVE THE FACTORY INSTALLED CO₂ POWERLET

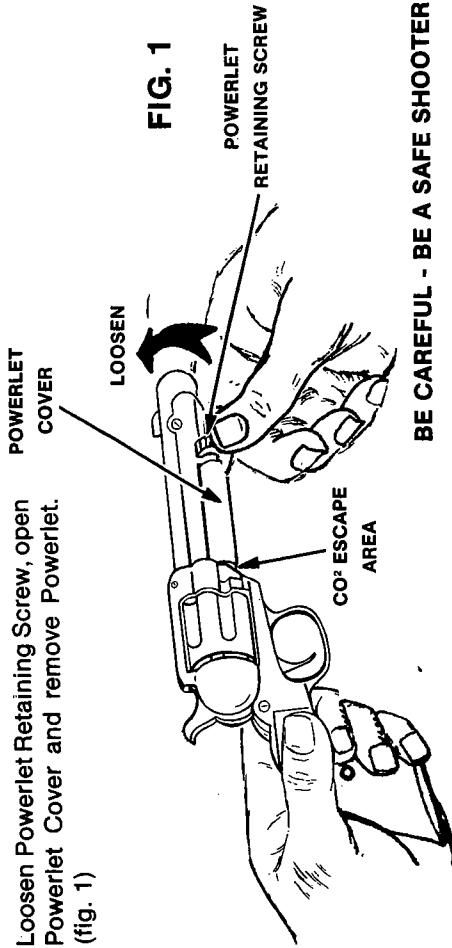

BE CAREFUL - BE A SAFE SHOOTER

STEP 2 HOW TO LOAD AND PIERCE CO₂ POWERLET

CAUTION: BEFORE CHARGING WITH NEW POWERLET, ALL PELLETS MUST BE REMOVED FROM GUN. SEE PAGES 7-8 "How to remove pellets from the 44."

- A Place new Powerlet, small neck towards Trigger, into position.
- B. Turn Powerlet Retaining Screw (Fig. 2) until finger tight.

NOTE: To avoid damage to the gun never use pliers or any tool to tighten Powerlet Retaining Screw.

- C. Close Powerlet Cover.
- D. Cock and fire gun several times to pierce Powerlet. If gun fails to fire the Powerlet was not pierced. Remove and inspect Powerlet for small hole in nose. If Powerlet is not pierced, replace and repeat Step B.

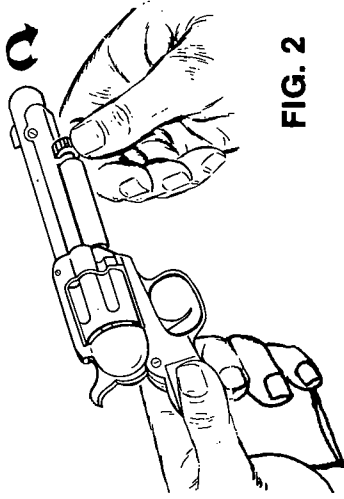 


FIG. 2

IMPORTANT: UNLOAD GUN. Cock Hammer and pull Trigger to pierce Powerlet. Don't try to pierce Powerlet by overtightening Powerlet Retaining Screw, or you will damage gun.

BE CAREFUL - BE A SAFE SHOOTER

