



# Model 760

.177 Caliber

BB/Pellet Pneumatic Air Rifle

## OWNER'S MANUAL

READ ALL INSTRUCTIONS AND WARNINGS IN THIS MANUAL BEFORE USING THIS AIR RIFLE

Incluye instrucciones en español al reverso

Crosman Corporation  
Rts. 5 & 20  
East Bloomfield, NY 14443

760J503

**WARNING:** Not a toy. Adult supervision required. Misuse or careless use may cause serious injury or death. May be dangerous up to 475 yards (435 meters). You and others with you should always wear shooting glasses to protect your eyes. Read all instructions before using. Buyer and user have the duty to obey all laws about the use and ownership of this air rifle.

THIS AIR RIFLE IS INTENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER.

Congratulations and thank you for purchasing the Model 760 .177 caliber BB/pellet air rifle. Please read this owner's manual completely. And remember, this air rifle is not a toy. Treat it with the same respect you would a firearm. Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use. If you have any questions regarding your new air rifle, please contact Customer Service at 1-800-724-7486, 716-657-6161 or [www.crosman.com](http://www.crosman.com).


### STEPS FOR SAFE SHOOTING

- Step 1. Learning the Parts of Your New Air Rifle
- Step 2. Operating the Safety
- Step 3. Pumping the Air Rifle
- Step 4. Loading and Unloading BBs

- Step 5. Loading and Unloading Pellets
- Step 6. Aiming and Firing Safely
- Step 7. Removing a Jammed BB or Pellet
- Step 8. Maintaining Your Air Rifle
- Step 9. Reviewing Safety

### Step 1. Learning the Parts of Your New Air Rifle

Learning the names of the parts of your new air rifle will help you to understand your owner's manual. Use this manual to increase your enjoyment of this air rifle.

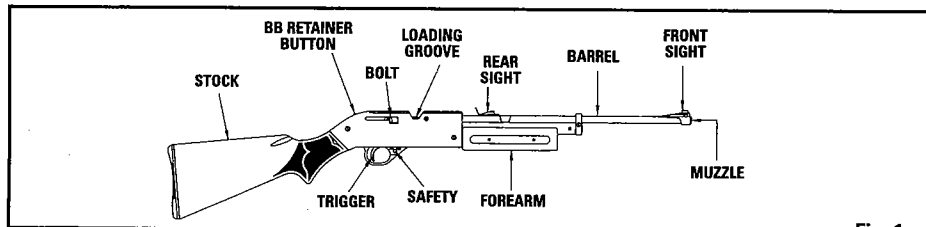

### Step 2. Operating the Safety

## Step 2. Operating the Safety

**⚠ WARNING:** Keep the air rifle "ON SAFE" until you are actually ready to shoot. Then push the safety to "OFF SAFE".

### A. To Put the Air Rifle "ON SAFE":

- Locate the safety directly in front of the trigger.
  - Push the safety from the left side all the way in (Fig. 2). The safety is not on unless it is pushed all the way in and the red ring around the safety is not showing. The air rifle will not fire when "On Safe".
- Even when the safety is "On Safe", you should continue to handle the air rifle safely. Do not ever point the air rifle at anything you do not intend to shoot.

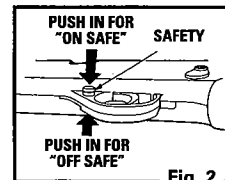


Fig. 2

### B. To Take the Air Rifle "OFF SAFE":

- Push the safety from the right side all the way in.
- The air rifle is ready to fire when "Off Safe".

When you can see the red ring around the safety, the air rifle is "Off Safe" and can be fired.

## Step 3. Pumping the Air Rifle

**⚠ WARNING:** Always hold the forearm firmly when opening and closing to prevent possible injury.

- Put the air rifle "On Safe". (See Step 2A)
- Open the forearm all the way until it stops (Fig. 3). Be sure to hold the forearm firmly as you open it. It could spring back into the closed position, possibly causing injury. Place your hands in the same positions shown in Fig. 3 in order to avoid being pinched should you lose hold of the forearm. Do not twist the forearm while pumping. Use straight strokes to prevent breakage.
- Be sure to use at least two pumps to create enough pressure to fire a BB or pellet out of the air rifle when the trigger is pulled. With only one pump, the BB or pellet may remain in the barrel resulting in an obstruction.

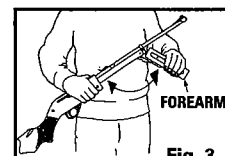


Fig. 3

**⚠ WARNING:** Never pump your air rifle more than 10 times. Over-pumping gives only a slight increase in power, if at all, and can cause major damage to your air rifle. Pumping more than 10 times may also leave a small amount of air in the air rifle after it is fired which may allow you to fire a second shot without additional pumping.

- Return the forearm to the original closed position with a smooth stroke. Be sure to hold the forearm firmly as you close it to prevent it from springing open and possibly causing injury.

## LOADING AND UNLOADING

When using BBs, follow Step 4 below. When using pellets, follow Step 5 below.

**⚠ WARNING:** Use BBs or .177 caliber pellets only. Never reuse ammunition. Use of any other ammunition can cause injury to you or damage to the air rifle.

### Step 4. Loading and Unloading BBs

#### A. Loading BBs

- Put the air rifle "On Safe". (See Step 2A).
- Point the air rifle in a SAFE DIRECTION.
- Slide the loading port cover toward the rear of the air rifle. (Fig. 4)
- Pour no more than 200 BBs into the reservoir hole. Do not put pellets in the reservoir hole because they will jam the reservoir.
- Close the loading port cover.
- Pull the BB retainer button back. (Fig. 5)
- Point the barrel straight down.
- With a hand twisting motion, shake and twist the air rifle (Fig. 5) to fill the visual magazine. (Fig. 6)
- Push the BB retainer button forward to keep the BBs in the magazine. (Fig. 6)
- With the barrel tilted downward, cock the bolt by pulling it all the way back and then pushing it all the way forward. The magnetic bolt will pick up a BB. (As you push the bolt forward, you can see the BB move through the loading groove.) (Fig. 6) The BB is now in position to be fired out of the barrel.

**NOTE:** BBs may not transfer from the magazine to the loading groove if the barrel is tilted upward.

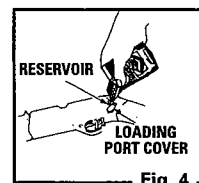


Fig. 4

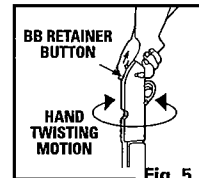


Fig. 5

#### B. Unloading BBs

- Put the air rifle "On Safe." (See Step 2A)
- Pull the BB retainer button back.
- Tilt the barrel upward.
- With a hand twisting motion, shake and twist the air rifle until ALL of the BBs are out of the visual magazine. (Fig. 7)
- Push the BB retainer button forward to block BBs from the visual magazine.
- Pump the air rifle at least two times. (See Step 3)
- Cock the bolt by pulling it all the way back and then pushing it all the way forward.
- Point the air rifle in a SAFE DIRECTION, take "Off Safe" (See Step 2B) and fire. This will unload any BB from the magnetic bolt.
- Tilt the barrel downward, pull the bolt all the way back and push it slowly forward to see if there is a BB on the magnetic bolt.
- If there is a BB on the magnetic bolt, pump the rifle (See Step 3) and cock the bolt by pulling it all the way back and then pushing the bolt all the way forward. Point the air rifle in a SAFE DIRECTION and fire.
- Repeat this unloading procedure until no BBs are visible on the magnetic bolt.




Fig. 6

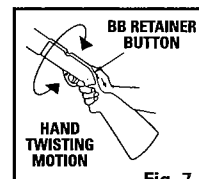


Fig. 7

